

*Official copies of these procedures are maintained at this website.  
Before using a printed copy, verify that it is the most current  
version by checking the document issue date on this website. Signed  
copies of these official procedures are maintained at the Training Office*

## C-A OPERATIONS PROCEDURES MANUAL

### 8.16.7 LINAC Compressed Air System

Text pages 2 through 3

#### Hand Processed Changes

<u>HPC No.</u>	<u>Date</u>	<u>Page Nos.</u>	<u>Initials</u>
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____

Approved: \_\_\_\_\_ Signature On File \_\_\_\_\_  
Collider-Accelerator Department Chairman Date

R. Grandinetti

## **8.16.7 LINAC Compressed Air System**

### **1. Purpose**

To provide operating instructions to Plant Engineering Refrigeration and Air Conditioning Engineers for the LINAC compressed air system.

### **2. Responsibilities**

Plant Engineering Refrigeration and Air Conditioning Engineers start and stop this system.

### **3. Prerequisites**

- 3.1 Startup - Coordinate with Water Systems and LINAC control.
- 3.2 Shutdown - Request permission from LINAC control.
- 3.3 Qualified and trained Plant Engineering, Air Conditioning and Refrigeration Engineers.

### **4. Precautions**

- 4.1 Do not operate compressor with valves closed.
- 4.2 Do not operate compressor without cooling water on.

### **5. Procedure**

- 5.1 Verify that oil level is at least 1/2 full as indicated in the sight glass.
- 5.2 Open cooling water valves to compressor, oil cooler, and after cooler.
- 5.3 Open supply valves to system.
- 5.4 Inspect condition of compressor drive belts.
- 5.5 Turn on compressor circuit breaker.
- 5.6 Start compressor at local start-stop station.

- 5.7 Observe compressor cycling, general operation, and restore alarms.
- 5.8 Check oil temperature (< 180 F), oil level (1/2 full), discharge air pressure (< 125 psi).
- 5.9 Place compressed air dryer system control to on position and observe "on" indicator light.
- 5.10 For shutdown, turn off compressor and dryer. Close cooling water valves to compressor, oil cooler and after cooler.

## **6. Documentation**

Fill in "Status of Equipment" log for LINAC compressor.

## **7. References**

LINAC flow diagram, C.T. Main Drawing #2484-402-M3.

## **8. Attachments**

[8.1 C-A-OPM-ATT 8.16.1.a "C-A Water Systems Status of Equipment Log"](#)